
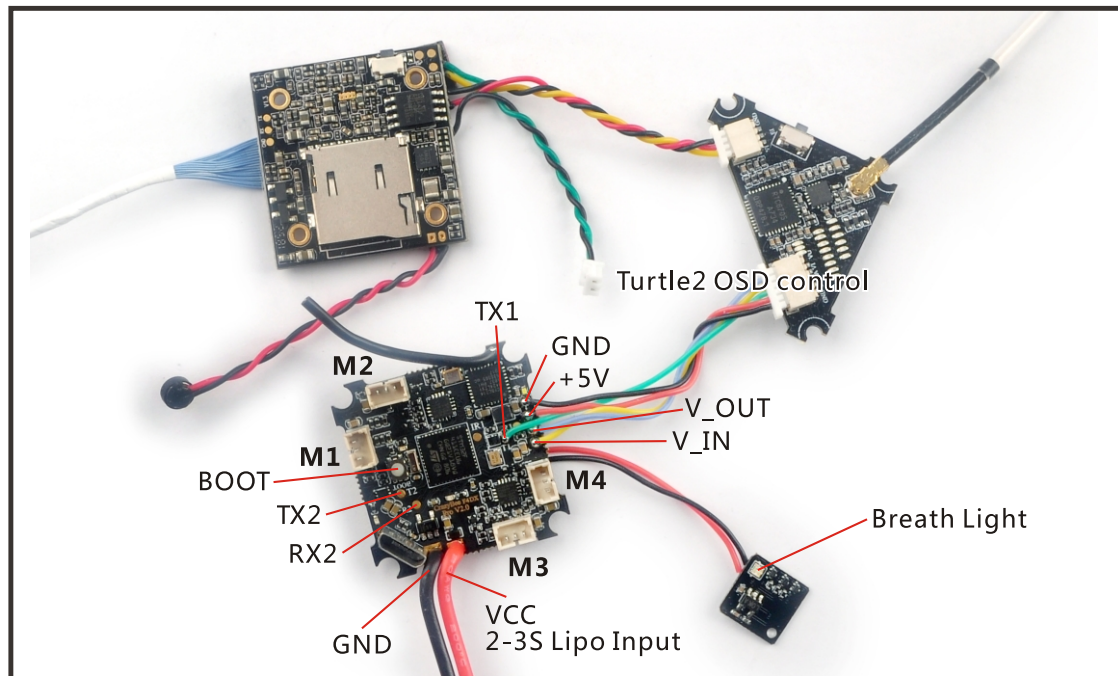


# Crazybee F4DX PRO V2.0 DSMX version connection diagram

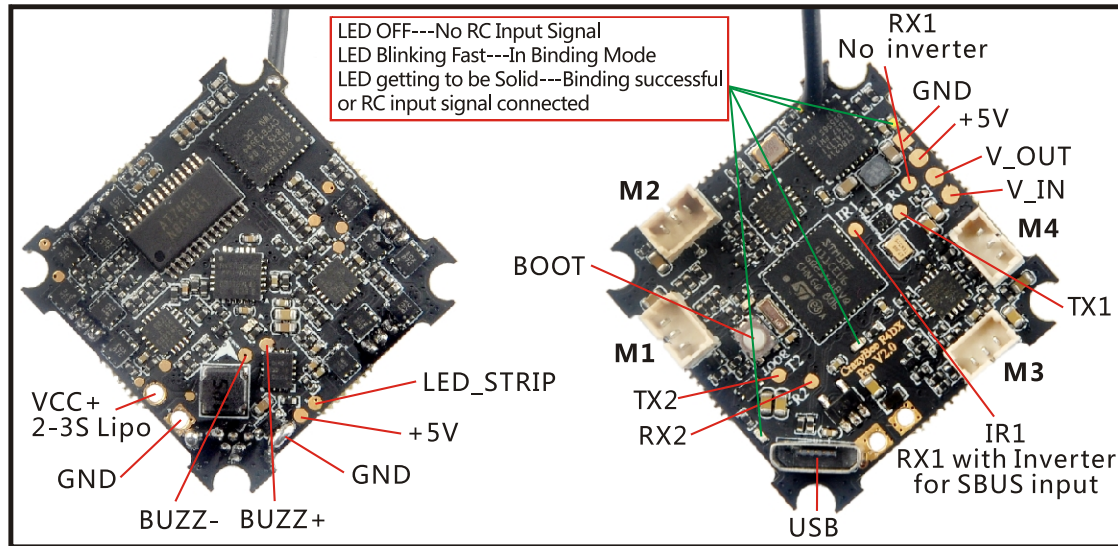

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	AUTO	Disabled
UART1	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	AUTO	TBS SmartAud
UART2	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>	Disabled	AUTO	Disabled

Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode

**Note:** Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX\_SERIAL feature.

SPEKTRUM2048 Serial Receiver Provider

Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode

**Note:** Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX\_SERIAL feature.

SPEKTRUM1024 Serial Receiver Provider

## Binding procedure:

1. Connect Crazybee F4 PRO DSM2/DSMX Version to computer and open Betaflight configurator, From CLI tab type: "set spektrum\_sat\_bind = 9" for DSMX radio or "set spektrum\_sat\_bind = 5" for DSM2 radio
2. Type "save" and after Flight controller reboot remove USB cable (=Power off the board)
3. Wait a second and reconnect the USB cable. After cold start satellite led combo on the backside of the board (2 red led+2 white led) should start blinking and transmitter should be turned on while pressing the bind button
4. After binding satellite LED combo should be solid. Connect Betaflight and use receiver tab to test that satellite is working correctly.
5. Final step is to go to CLI tab and type "set spektrum\_sat\_bind = 0" and then type "save". This must be done so that satellite doesn't go back to binding mode when the flight controller is repowered again.