
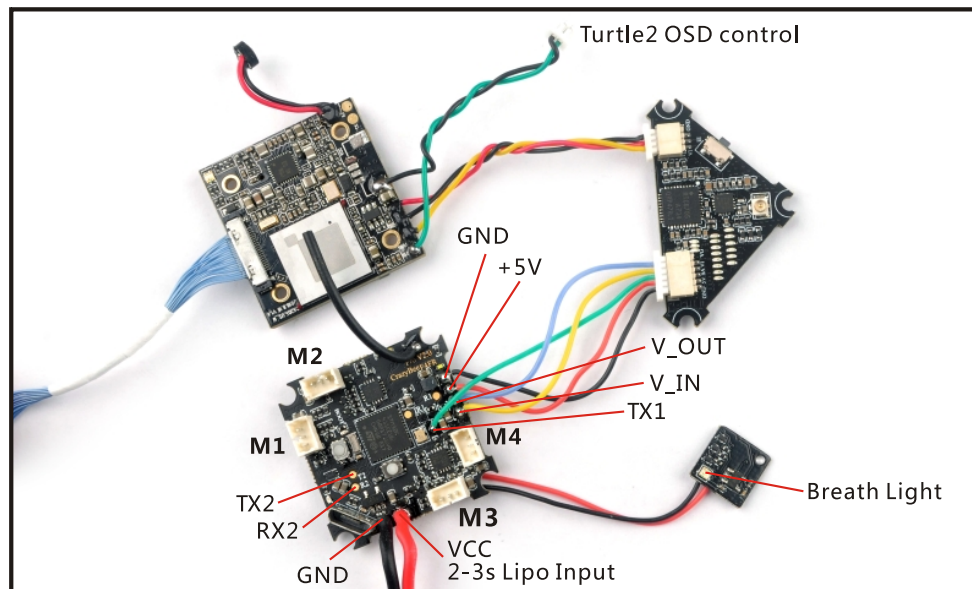



Crazybee F4FR PRO V2.0 Frsky version connection diagram

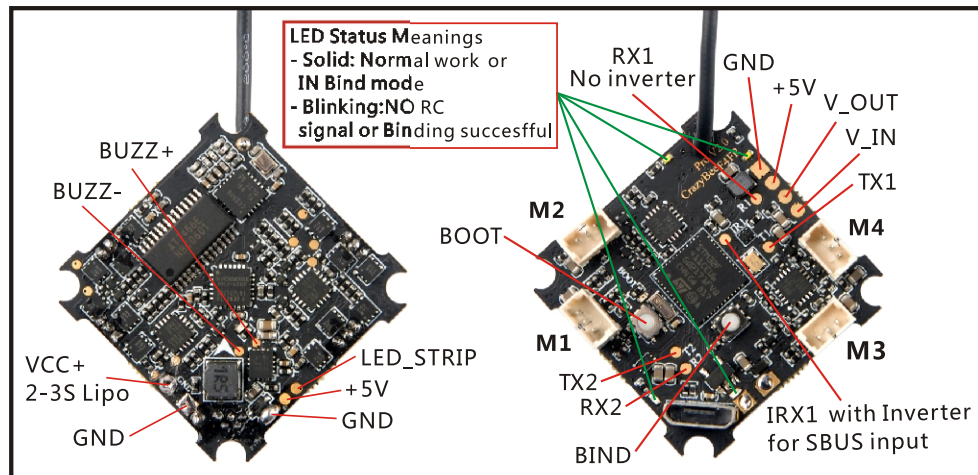

Ports WIKI

Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset.
Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to reflash and erase your configuration if you do.

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	<input checked="" type="checkbox"/> 115200 ▼	<input type="checkbox"/>	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼
UART1	<input type="checkbox"/> 115200 ▼	<input type="checkbox"/>	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	TBS SmartAud ▼ AUTO ▼
UART2	<input type="checkbox"/> 115200 ▼	<input type="checkbox"/>	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼

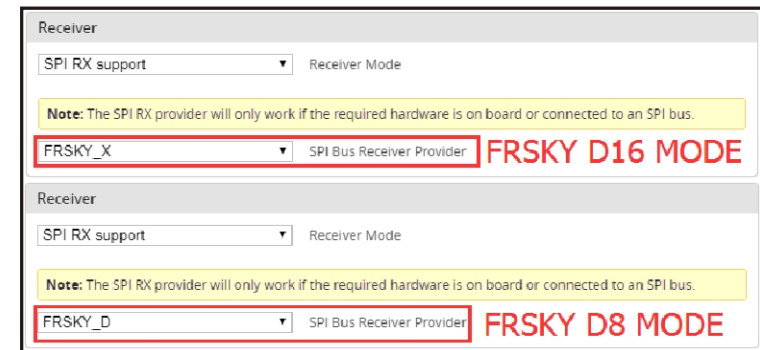

Binding procedure:

1. Connect usb or battery for the Flight controller
2. Press and holding the Binding button for 2 seconds until the 4 LED getting to be solid
3. Make your transmitter into binding mode , the 4 LED will starting blinking after binding successfully.

Simple bind method

Plug the USB to the computer
 Open Betaflight and go to CLI command
 Type "bind" if the Betaflight firmware is 4.0 or Type "frsky_bind" if the Betaflight firmware is 3.5 , then the FC will getting into binding mode
 Then make your Taranis into binding mode.

