
1.Connection Diagram

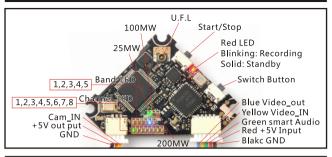

2.VTX and SmartAudio set

Vtx power set

Go to Betaflight configurator CLI tab , type "set vtx_power=1" to choose 25mw, "set vtx_power=2" to choose 100mw, "set vtx_power=3" to choose 200mw, need to type "save"

There are 3 ways to switch the vtx channels:

- **1.**Short press to choose the VTX channel , Press and hold the butoon for 2 seconds and release to choose the VTX band(Can't save , it will lost the channel while power off)
- 2.Enable Smartaudio for UART1, then move the stick of the transmitter (THR MID+YAW LEFT+ PITCH UP) to enter OSD Menu, Enter to Features, then enter to VTX SA to set VTX Band and channel

Identifier						
USB VCP	115200 ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼		
UART1	115200 🔻	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	TBS SmartAud ▼ AUTO ▼		
UART2	115200 ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼	Disabled ▼ AUTO ▼		



3.Go to Betaflight CLI , type the command:

Set vtx band=3

Set vtx channel=1


save

Notes: The vtx_freq should match the vtx_band and vtx_channle as the VTX Channel list shows. For example, if you set vtx_freq=5732, you should set vtx_band=5 and VTX_channel=3

Frequency and channel frequency table:

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8				
5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M				
5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M				
5705M	5685M	5665M	5665M	5885M	5905M	5905M	5905M				
5740M	5760M	5780M	5800M	5820M	5840M	5860M	5880M				
5658M	5695M	5732M	5769M	5806M	5843M	5880M	5917M				
	5865M 5733M 5705M 5740M	5865M 5845M 5733M 5752M 5705M 5685M 5740M 5760M	5865M 5845M 5825M 5733M 5752M 5771M 5705M 5685M 5665M 5740M 5760M 5780M	5865M 5845M 5825M 5805M 5733M 5752M 5771M 5790M 5705M 5665M 5665M 565M 5740M 5760M 5780M 5800M	5865M 5845M 5825M 5805M 5758M 5733M 5752M 5771M 5790M 5899M 5705M 5685M 5665M 5665M 5885M 5740M 5760M 5780M 5800M 5820M	5865M 5845M 5825M 5805M 5785M 5756M 5733M 5752M 5771M 5790M 5809M 5828M 5705M 5685M 5665M 5855M 5905M 5740M 5760M 5780M 5820M 5820M 5840M	5865M 5845M 5825M 5805M 5785M 5765M 5745M 5733M 5752M 5771M 5790M 5809M 5828M 5847M 5705M 5685M 5665M 5885M 5905M 5905M 5740M 5760M 5780M 5820M 5840M 5860M				

3.DVR setting

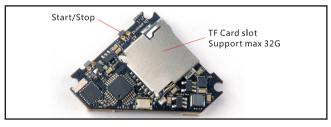

The DVR will recording automatically when power on . Press the start/stop to start or stop recording.

4.DVR firmware update

Step 1, Download the latest firmware from www.happymodel.cn, extract the CRESFW.BIN to an empty TF-SD card
Step 2, Put the TF-SD card into Diamond vtx, and power on for it, the red Led will starting to flashing, Then waiting to the red LED turn off, this indicates firmware upgrading successfully
Step3, Important!!! You must power off the Diamond VTX immediately once the red LED turn off. Don't turn off the power during firmware upgrading, And remember to remove the CRESFW.BIN firmware from TF-SD card after upgrading.