



New Crazybee F4 V3.0 Flysky version bind procedure

1.Connect to Betaflight configurator then move to CLI Tab, then Type the BIND Code "bind_rx_spi"

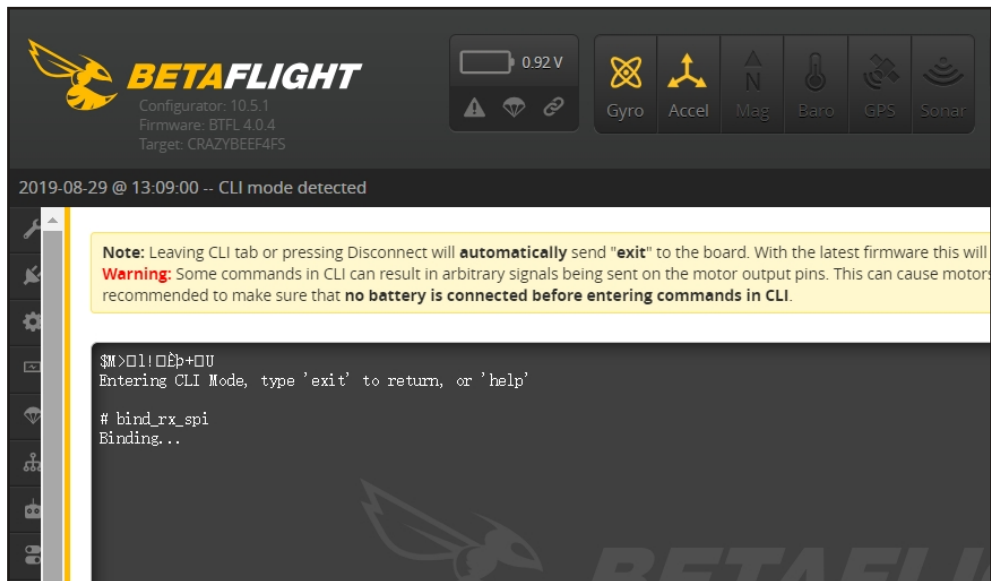

The red LED at the bottom of the V3.0 flight controller will starting to blink fast, this indicate the onboard receiver is in bind mode

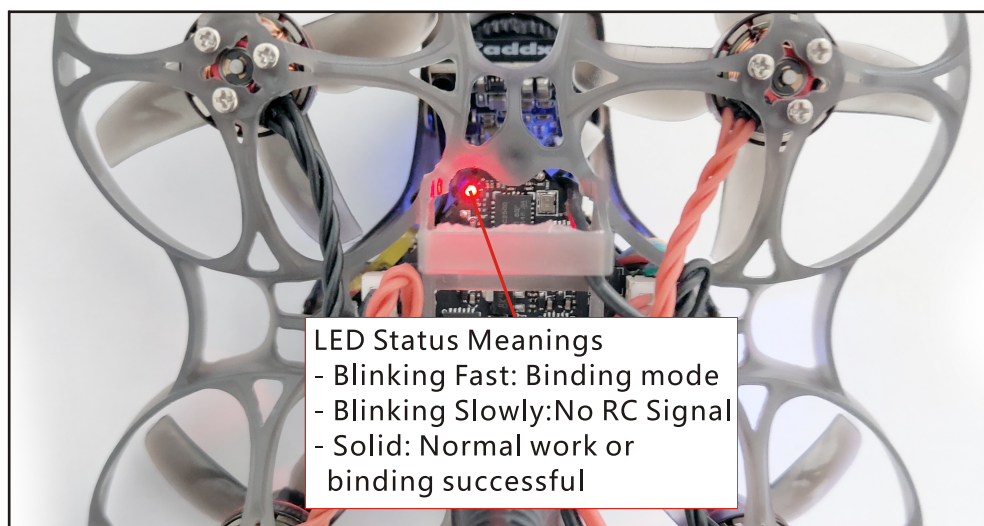

2.Turn on your transmitter and Choose AFHDS-2A for the receiver mode(Some Flysky transmitter default setting is AFHDS-2A). Then ENTER RX bind, if bind successful the Red Led at the bottom of the flight controller will getting to be solid. Then reconnect the USB and exist bind mode . Now move to receiver tab of the Betaflight configurator to check the receiver works

