

Features

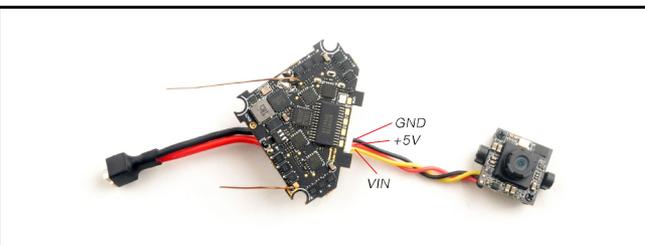
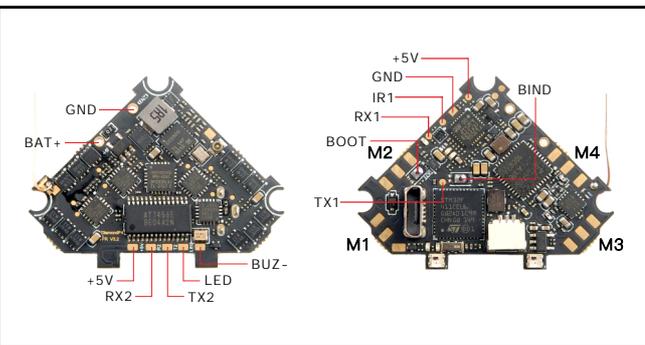
The lightest 1S Whoop and Toothpick 2-IN-1 fpv drone
Comes with tooth pick frame for convert
Powerful and efficiency
The lightest 1s AIO 5IN1 F4 flight controller
New Unibell SE0702 brushless motors with pcb wire board
Built-in OPENVTX up to 400mw
Low profile Canopy design

Specifications

Brand Name: Happymodel
Item Name: Mobeetle6 whoop and toothpick 2-IN-1 FPV Racer Drone
Wheelbase: 65mm
Size: 80mm*80mm*30mm
Weight: 17.5g (without battery)

Package includes

Item Name	Qty
65mm whoop Frame (Mobula6 frame)	1
65mm toothpick frame(Mobeetle6 frame)	1
Option1: DiamondF4 ELRS built-in SPI ELRS receiver	1
Option2: DiamondF4 FR built-in SPI FRSKY receiver	
SE0702 KV23000 Unibell brushless motor	4
Gemfan 1210 31mm propeller(4cw+4ccw)	1
Runcam Nano3	1
Built-in 5.8G 48ch 25mw -400mw OPENVTX	1
1S 300mah Lipo battery	2
Mobula6 canopy	1
Propeller disassemble tool	1
Screwdriver	1
1S USB charger	1

Flight controller connection diagram

Binding procedure

1.Plug USB to the flight controller and connect to Betaflight configurator.
Go to the CLI command tab from Betaflight configurator then type "bind_rx" or
Go to Receiver tab from Betaflight configurator then hit "Bind Receiver",
the red LED on the flight controller will getting to be solid ,that means the receiver is in bind mode.

Entering CLI Mode, type 'exit' to return, or 'help'

```
#
# Building AutoComplete Cache ... Done!
#
# bind_rx
Binding...
```

Threshold	Stick Center	'Stick High' Threshold
1050	1500	1900
End	Yaw Deadband	3D Throttle Deadband
0	0	50
<input type="button" value="Bind Receiver"/> <input type="button" value="Refresh"/> <input type="button" value="Save"/>		

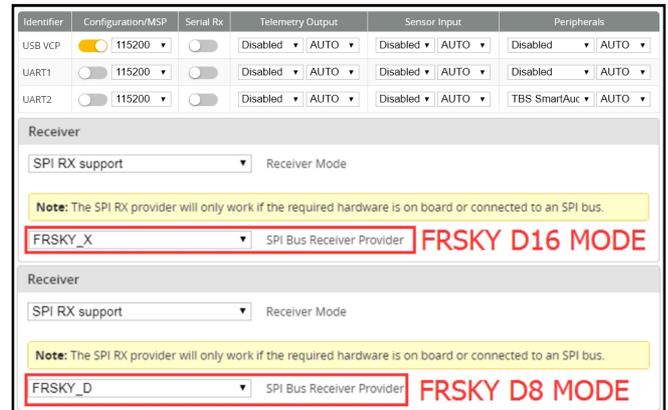
2.Turn on your Frsky Taranis transmitter, and move to BIND OPTION from SETUP MENU, Choose receiver mode D16 or D8 according to your Betaflight receiver configuration (Frsky_X = D16 mode, Frsky_D=D8 mode)we recommend use D8 mode



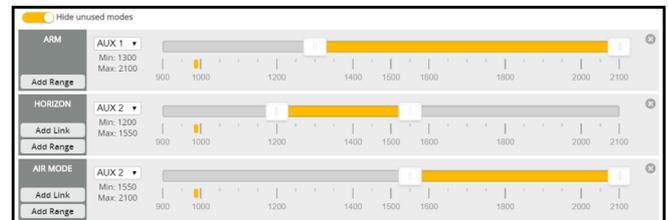
3.ENT [Bind] to binding with the Mobeetle6 ,the red LED at the bottom of the flight controller will blinking slowly ,this indicate binding successfully, and then exist binding mode of your Frsky transmitter, the red LED at the bottom of the flight controller will getting to be solid again, this indicate working normal.

Receiver configuration

Please set Receiver mode to be SPI RX Support from the Configuration tab of the Betaflight Configurator, then select FRSKY_X Provider for FRSKY D16 MODE or Select FRSKY_D Provider for FRSKY D8 MODE, don't enable Serial RX since the CRAZYBEE Flight controller is integrated SPI BUS Receiver


Arm/Disarm the Motor

1. The Default Arm/Disarm switch for Mobeetle6 is AUX1(Channel 5),and you can also customize it with Betaflight Configurator.



2.Turn on the Frsky transmitter (Use X9D+ as an example) and move to the MIXER interface, Set "SA" or "SB" switch etc. for Ch5 to ARM/DISARM the motor.



3.The default channel map for Mobeetle6 Frsky version is TAER1234, please make sure your transmitter is matched, otherwise it will can't be armed. Toggle the AUX1 Switch ,the Green LED on the flight controller will getting to be solid, this indicates the motor was armed . And also you can found "Armed" displayed on your FPV Goggles or the FPV Monitor. Please make sure keep the Mobeetle6 level before arming .Be careful and enjoy your flight now !



VTX Bands and Channels setup

VTX Table

6 Number of bands 8 Number of channels by band

Name	Letter	Factory	1	2	3	4	5	6	7	8	Band
BOSCAM_A	A	5865	5845	5825	5805	5785	5765	5745	5725	5705	Band 1
BOSCAM_B	B	5733	5752	5771	5790	5809	5828	5847	5866	5885	Band 2
BOSCAM_E	E	5705	5685	5665	5645	5625	5605	5585	5565	5545	Band 3
FATSHARK	F	5740	5760	5780	5800	5820	5840	5860	5880	5900	Band 4
RACEBAND	R	5658	5695	5732	5769	5806	5843	5880	5917	5954	Band 5
LOWRACE	L	5333	5373	5413	5453	5493	5533	5573	5613	5653	Band 6

5 Number of power levels

1	2	3	4	5	Value
10	2	14	20	26	
0	RCE	25	100	400	Label

There are 2 ways to switch the vtx channels:

1.If we need to use Channel 5769 then we should Go to Betaflight CLI,type the command:
Set VTX_band=5

Set VTX_channel=4
save

2.Disarm the Mobeetle6 and then move the stick of the transmitter(THR MID+YAW LEFT+PITCH UP) to enter OSD Menu,Enter to Features,then enter to VTX SA to set VTX Band and channel

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200	Disabled	AUTO	Disabled	AUTO
UART1	115200	Disabled	AUTO	Disabled	AUTO
UART2	115200	Disabled	AUTO	Disabled	TBS SmartAuc


Mixer type and ESC/motor protocol

Mixer

Quad X

Props Out

reversed

Motor direction is reversed

ESC/Motor Features

DSHOT300 ESC/Motor protocol

MOTOR_STOP Don't spin the motors when armed

ESC_SENSOR Use KISS/BLHeli_32 ESC telemetry over a separate wire

Bidirectional DShot (requires supported ESC firmware)

5.5 Motor Idle (% , static)

Default PID settings for Betaflight 4.3.0

	Proportional	Integral	D Max	Derivative	Feedforward
ROLL	123	143	80	80	226
PITCH	116	135	77	77	212
YAW	123	143	0	0	226

Mode: RPY

Damping: D Gains

Tracking: P & I Gains

Stick Response: FF Gains

Dynamic Damping: D Max

Drift - Wobble: I Gains

Pitch Damping: Pitch:Roll D

Pitch Tracking: Pitch:Roll P, I & FF

Master Multiplier: 1.45

ESC Check and Flash firmware

1.Download New release BLhelisuite from:

<https://www.mediafire.com/folder/dx6kfaasyo24l/BLHeliSuite>

2.Plug the usb and connect the flight controller to computer then plug battery



3.Open the Device Manager of your computer, find the Ports, please make sure the Com port Serial Number is under 255, otherwise it will can't connect to the BLHELISUITE. You can change the port serial number like the following step :

Device Manager - Ports (COM & LPT) - STM32 Virtual COM Port (COM436)

Port Settings - Bits per second: 9600, Data bits: 8, Parity: None, Stop bits: 1, Control: None

Advanced Settings for COM436 - Use FIFO buffers (requires 16550 compatible UART), COM Port Number: COM256

4.Open the BLHELISUITE, Select SILABS BLHeli Bootloader (Cleanflight) from the third tab on the top side. Then Select the right Serial com port and Click connect. You can also Flash the new release BLHeli_s firmware via the BLHELISUITE, the firmware Target is "O-H-05"

BLHeliSuite 16.7.14.9.0.1 [m4wCint SILABS-BLB @COM3]

ESC setup ESC tools Select ATME / SILABS Interface Options ? BLHeli info Save Screenshot

SILABS ESC Setup ESC overview Motors Make interfaces

ESC# 1 - Name: O-H-05 Firmware target for Multicopter Motors BLHeli_S Revision: 16.80

Startup Power: 1.00, Motor Direction: Normal, PPM Min Throttle: 1148, Startup Beep Volume: 40

Temperature Protection: 140, Demag Compensation: Low, PPM Max Throttle: 1832, Beacon/Signal Volume: 80

Low RPM Power Protect: On, Motor Timing: Medium, PPM Center Throttle: 1488, Beacon Delay: 10 minutes

Brake On Stop: Off

Flash Firmware, Click check to see the details of the 4in1 ESC

Port: COM 3 Baud: 115200 Disconnect Multiple ESC / Master#1 1 2 3 4 Check

Flight controller firmware update

1.Install latest STM32 Virtual COM Port Driver

<http://www.st.com/web/en/catalog/tools/PF257938>

2.Install STM BOOTLOAD Driver (STM Device in DFU MODE)

3.Open Betaflight configurator and choose firmware target "CRAZYBEEF4FR",then select the firmware version.

4.There are 2 ways to get in DFU Mode: 1). solder the boot pad and then plug USB to computer 2). loading betaflight firmware and hit "flash", then it will getting into DFU Mode automatically.

5.Open Zadig tools to replace the drivers from STM32 Bootloader to WINUSB Driver.

6.Reconnect the flight controller to the computer after replace driver done , and open Betaflight Configurator, loading firmware and flash.

Zadig

Device: Options Help

STM32 BOOTLOADER

Driver: STT130 (v3.0.4.0) WinUSB (v6.1.7600.16385)

USB ID: 0483 DF11

Replace Driver

"Flip over after crash" procedure

Set one channel of your radio transmitter to activate the Flip over function in the Mode tab of Betaflight configurator.

The default Switch for Activate "Flip" is AUX3(Channel7)

FLIP OVER AFTER CRASH AUX3

Add Link Max: 2100

Add Range

